



SS10 SHOWER SEAL

WATER-BASED NANO SOLUTION THAT REPELS RAINWATER FROM EXTERIOR GLASS, MASONRY WALLS, GRANITE AND MARBLE SURFACES

USES


1. **Repels water** on car windows; suitable for exterior glass, bathroom wall tiles, granite, marble and timber surfaces.
2. An ideal **solution for leaking bathrooms and toilets**. Simply spray, brush or flood the toilet floor.
3. **Stops leaks in the toilet floor** without hacking.
4. Prevents algae growth.

FEATURES

1. Solvent-free aqueous silicone ester emulsion.
2. Permanently bonds to substrate.
3. Reduces water absorption of building materials by 95%.
4. Waterproofs external brick walls and exterior walls without leaving any residue or stains.
5. Added into low-slump cementitious products such as imitation stone blocks and paving stones to significantly reduce water permeability and the occurrence of unsightly finishes.



SS10 on wood surface

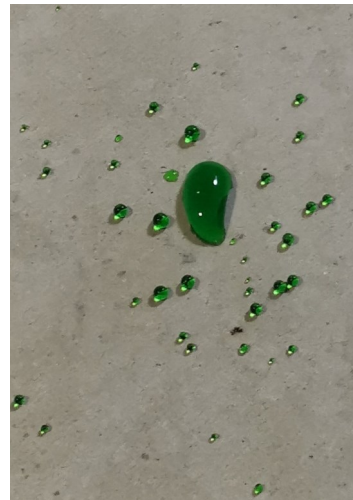

SS10 on cement surface

WARRIOR PTE LTD

Blk 17 Marsiling Industrial Estate Road 1 # 01-11 Singapore 739279

Tel: (65) 6364 5100 , 6364 5060 , 6367 3676

war99@singnet.com.sg www.warrior.com.sg

bizSAFE₃



SS10 SHOWER SEAL

WATER-BASED NANO SOLUTION THAT REPELS RAINWATER FROM EXTERIOR GLASS, MASONRY WALLS, GRANITE AND MARBLE SURFACES

APPLICATION METHODS

FOR TOILET FLOOR WATERPROOFING BY FLOODING; EFFECTIVE FOR MINOR LEAKS AND SEEPAGES

1. Clean and let the toilet dry for 1 day before application.
2. Dilute **SS10 + Water = 1 + 5 or less**
3. Apply by brush or spray in 2 coats wet-over-wet onto the wall if needed.
4. Cover the drain hole with masking tape or plasticine clay. Flood the floor with 1 mm thickness of the solution for 1 hour. Allow it to seep completely into the tiled floor.
5. Allow overnight curing before using the toilet.
6. Let water drip dry naturally for about 5 to 7 days.
7. Check for the results 7 days later. If it is still leaking, it could be due to pipe leakage.
8. Please engage the services of a waterproofing contractor.

If stains appear, remove with C100 Citric Kleen.

FOR EXTERNAL WALLS

Stone is sensitive. Test apply on a small area to check on the changes in shade before full application.

1. Dilute **SS10 + Water = 1 + 10**
2. Apply by straight-line spray or by brush, roller or flooding.
3. Avoid application if there is a high possibility of rain.
4. Allow 12 hours for curing.
5. If painting is needed, paint over while SS10 is still damp.

FOR GLASS

1. Dilute **SS10 + Water = 1 + 10**
2. Apply with a roller or paint brush. Let dry on the glass for 10 minutes before polishing it with a tissue paper till shine.

TECHNICAL DATA

1. Physical Form: Liquid with slight alcoholic odor
2. Specific Gravity: 0.95
3. Coverage: 30 - 40 square metres /kg depending on the porosity of the substrate
4. Health & Safety: Non-hazardous, non-toxic and non-flammable

PACKING

0.5-litre bottle, 1-litre bottle, 5-litre carboy, 20-litre jerry can

It is advisable to test the product on a small spot onsite before use.

Disclaimer:

The information provided in this brochure is ensured to be as accurate as possible at the time of inclusion, however there may be inadvertent and occasional errors which may have slipped from our notice. Warrior Pte Ltd does not guarantee and make no representations or warranties of any kind about the information, advice and opinions provided and reserves the right to make changes and corrections at any time, without prior notice to any parties. Warrior Pte Ltd accepts no liability for any inaccuracies or omissions in its brochure and any decisions made based on information and opinions contained in the brochure is the sole responsibility of the user.

WARRIOR PTE LTD

Blk 17 Marsiling Industrial Estate Road 1 #01-11 Singapore 739279

Tel: (65) 6364 5100, 6364 5060, 6367 3676

war99@singnet.com.sg www.warrior.com.sg

